

The INNOVATIVE and SMALLEST

## Z-Wave GOAP Dimmer

ORDERING CODE	Z-WAVE FREQUENCY
ZMNHDD1	868,4 MHz
ZMNHDD2	921,4 MHz
ZMNHDD3	908,4 MHz
ZMNHDD4	869,0 MHz
ZMNHDD5	916,0 MHz
ZMNHDD8	865,2 MHz

This Z-Wave module is used for dimming the bulb or to manage the speed of a fan. The module can be controlled either through a Z-Wave network or through the wall switch. The module is designed to be mounted inside a "flush mounting box", hidden behind a traditional wall switch. Module measures power consumption of bulb or fan and supports connection of digital temperature sensor. It is designed to act as repeater in order to improve range and stability of Z-wave network.

### Supported switches

Module supports mono and bi-stable switches (input I1).

### Installation

- To prevent electrical shock and/or equipment damage, disconnect electrical power at the main fuse or circuit breaker before installation or any servicing.
- Make sure, that no voltage is present in the installation.
- Prevent the disconnecting device from being switched on accidentally.
- Connect the module according to electrical diagram.
- Locate the antenna far from metal elements (as far as possible).
- Do not shorten the antenna.

### Danger of electrocution!

- Module installation requires a great degree of skill and it may be performed only by a qualified and licensed electrician.
- Even when the module is turned off, voltage may be present on its terminals.

### Note!


Do not connect the module to loads exceeding recommended values. Connect the module only in accordance to the below diagrams. Improper connections may be dangerous.

**Electrical installation must be protected by directly associated over current protection fuse 1A, gG or Time lag T, rated breaking capacity 1500A (ESKA 522.717) must be used according to wiring diagram to achieve appropriate overload protection of the module.**

### Package contents:

- Flush Dimmer


### Electrical diagram 230VAC

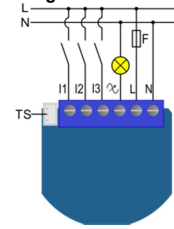

### Notes for the diagram:

- N** Neutral lead
- L** Live lead
- $\sphericalangle$  Output for electrical device
- I3** Input for switch/push button or sensor
- I2** Input for switch/push button or sensor
- I1** Input for push button/switch
- TS** Terminal for digital temperature sensor (only for Flush Dimmer module compatible digital temperature sensor, which must be ordered separately).

### Electrical diagram 24VDC

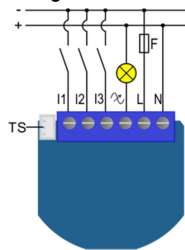

### Notes for the diagram:

- N** + VDC
- L** - VDC
- $\sphericalangle$  Output for electrical device
- I3** Input for switch/push button or sensor
- I2** Input for switch/push button or sensor
- I1** Input for push button/switch
- TS** Terminal for digital temperature sensor (only for Flush Dimmer module compatible digital temperature sensor, which must be ordered separately).



**S** Service button (used to add or remove module from the Z-Wave network in case of 24 V SELV power supply).

**WARNING:** Service button S must NOT be used when module is connected to 110-230V power supply.  
**NOTE:** When overload is detected, module automatically switches off the output. In this case check if the load is according to specifications and if connections are according diagram. To recover module in normal state, you need to power cycle the module.

### Module Inclusion (Adding to Z-Wave network)

- Connect module to power supply (with

- temperature sensor connected - if purchased),
- enable add/remove mode on main controller
- auto-inclusion (works for about 2 minutes after connected to power supply) or
- press push button I1 three times within 3s (3 times change switch state within 3 seconds) or
- press service button **S** (only applicable for 24 V SELV supply voltage) for more than 2 second.

**NOTE1:** For auto-inclusion procedure, first set main controller into inclusion mode and then connect module to power supply.

**NOTE2:** When connecting temperature sensor to module that has already been included, you have to exclude module first. Switch off power supply, connect the sensor and re-include the module.

### Module Exclusion/Reset (Removing from Z-Wave network)

- Connect module to power supply
- bring module within maximum 1 meter (3feet) of the main controller,
- enable add/remove mode on main controller,
- press push button I1 five times within 3s ( 5 times change switch state within 3 seconds) in the first 60 seconds after the module is connected to the power supply or
- press service button **S** (only applicable for 24 V SELV supply voltage) for more than 6 second.

By this function all parameters of the module are set to default values and own ID is deleted.

If push button I1 is pressed three times within 3s (or service button S is pressed more than 2 and less than 6 seconds) module is excluded, but configuration parameters are not set to default values.

**NOTE:** If the module is included with parameters 100 or 101 with values different to default and module reset is done, wait at least 30s before next inclusion.

### Association

Association enables Flush Dimmer module to transfer commands inside Z-Wave network directly (without main controller) to other Z-Wave modules.

### Associated Groups:

- Group 1: Lifeline group (reserved for communication with the main controller), 1 node allowed.
- Group 2: basic on/off (triggered at change of the input I1 state and reflecting its state) up to 16 nodes
- Group 3: start level change/stop level change (triggered at change of the input I1 state and reflecting its state) up to 16 nodes
- Group 4: multilevel set (triggered at changes of state/value of the Flush Dimmer) up to 16 nodes
- Group 5: basic on/off (triggered at change of the input I2 state and reflecting its state) up to 16 nodes.
- Group 6: Notification report (triggered at change of the input I2 state and reflecting its state) up to 16 nodes.
- Group 7: Binary sensor (triggered at change of the input I2 state and reflecting its state) up to 16 nodes.
- Group 8: basic on/off (triggered at change of the input I3 state and reflecting its state) up to 16 nodes.
- Group 9: notification report (triggered at change of the input I3 state and reflecting its state) up to 16 nodes.
- Group 10: binary sensor report (triggered at change of the input I3 state and reflecting its state) up to 16 nodes.
- Group 11: multilevel sensor report (triggered at change of temperature sensor) up to 16 nodes.

### Endpoint 1:

- Group 1: Lifeline group, 0 nodes allowed.
- Group 2: basic on/off (triggered at change of the input I1 state and reflecting its state) up to 16 nodes
- Group 3: multilevel set (triggered at changes of state/value of the Flush Dimmer) up to 16 nodes

Group 4: start level change/stop level change (triggered at change of the input I1 state and reflecting its state) up to 16 nodes

### Endpoint 2:

- Group 1: Lifeline group, 0 nodes allowed.
- Group 2: basic on/off (triggered at change of the input I2 state and reflecting its state) up to 16 nodes.
- Group 3: Notification Report (triggered at change of the input I2 state and reflecting its state) up to 16 nodes.
- Group 4: Binary Sensor Report (triggered at change of the input I2 state and reflecting its state) up to 16 nodes.

### Endpoint 3:

- Group 1: Lifeline group, 0 nodes allowed.
- Group 2: basic on/off (triggered at change of the input I3, state and reflecting its state) up to 16 nodes.
- Group 3: Notification Report (triggered at change of the input I3 state and reflecting its state) up to 16 nodes.
- Group 4: Binary Sensor Report (triggered at change of the input I3 state and reflecting its state) up to 16 nodes.

### End point 4:

- Group 1: Lifeline group, 0 nodes allowed.
- Group 2: multilevel sensor report (triggered at change of temperature sensor) up to 16 nodes.

### Configuration parameters

#### Parameter no. 1 – Input 1 switch type

Available config. parameters (data type is 1 Byte DEC):

- default value 0
- 0 - mono-stable switch type (push button) – button quick press turns between previous set Dimmer value and zero
- 1 - bi-stable switch type

#### Parameter no. 2 – Input 2 switch type

Available config. parameters (data type is 1 Byte DEC):

- default value 0
- 0 - mono-stable switch type (push button) – button quick press turns between previous set Dimmer value and zero
- 1 - bi-stable switch type

#### Parameter no. 3 – Input 2 contact type

Available config. parameters (data type is 1 Byte DEC):

- default value 0
- 0 - NO (normally open) input type
- 1 - NC (normally close) input type

#### Parameter no. 4 – Input 3 contact type

Available config. parameters (data type is 1 Byte DEC):

- default value 0
- 0 - NO (normally open) input type
- 1 - NC (normally close) input type

#### Parameter no. 10 - Activate / deactivate functions ALL ON / ALL OFF

Available config. parameters (data type is 2 Byte DEC):

- default value 255
- 255 - ALL ON active, ALL OFF active.
- 0 - ALL ON is not active, ALL OFF is not active
- 1 - ALL ON is not active, ALL OFF active
- 2 - ALL ON active, ALL OFF is not active

Flush Dimmer module responds to commands ALL ON / ALL OFF that may be sent by the main controller or by other controller belonging to the system.

#### Parameter no. 11 - Automatic turning off output after set time

Available config. parameters (data type is 2 Byte DEC):

- default value 0
- 0 - Auto OFF disabled
- 1 - 32536 = 1second - 32536 seconds Auto OFF enabled with define time, step is 1 second.

#### Parameter no. 12 - Automatic turning on output after set time

Available config. parameters (data type is 2 Byte DEC):

- default value 0

- 0 - Auto ON disabled
- 1 - 32535 = 1second - 32535 seconds Auto ON enabled with define time, step is 1 second.

#### Parameter no. 20 – Enable/Disable 3way switch

Dimming is done by push button or switch connected to I1 (by default). Enabling 3way switch, dimming can be controlled by push button or switch connected to I1 and I2. Available config. parameters (data type is 1 Byte DEC):

- default value 0
- 0 - single push button (connected to I1)
- 1 - 3 way switch (connected to I1 and I2)

#### Parameter no. 21 – Enable/Disable Double click function

If Double click function is enabled, a fast double click on the push button will set dimming power at maximum dimming value. Available configuration parameters (data type is 1 Byte DEC):

- default value 0
- 0 - double click disabled
- 1 - double click enabled

#### Parameter no. 30 - Saving the state of the device after a power failure

Available config. parameters (data type is 1 Byte DEC):

- default value 0
- 0 - Flush Dimmer module saves its state before power failure (it returns to the last position saved before a power failure).
- 1 - Flush Dimmer module does not save the state after a power failure, it returns to "off" position.

#### Parameter no. 40 – Power reporting in Watts on power change

Set value means percentage, set value from 0 - 100=0% - 100%. Available configuration parameters (data type is 1 Byte DEC):

- default value 5
- 0 - reporting disabled
- 1 - 100 = 1% - 100% Reporting enabled. Power report is send (push) only when actual power in Watts in real time changes for more than set percentage comparing to previous actual power in Watts, step is 1%.

**NOTE:** if power changed is less than 1W, the report is not send (pushed), independent of percentage set.

#### Parameter no. 42 – Power reporting in Watts by time interval

Set value means time interval (0 - 32767) in seconds, when power report is send. Available configuration parameters (data type is 2 Byte DEC):

- default value 0
- 0 - reporting disabled
- 1 - 32767 = 1 second - 32767 seconds. Reporting enabled. Power report is send with time interval set by entered value.

#### Parameter no. 60 – Minimum dimming value

Available config. parameters (data type is 1 Byte DEC):

- default value 1 = 1% (minimum dimming value)
- 1 - 98 = 1% - 98%, step is 1%. Minimum dimming values is set by entered value.

**NOTE:** The minimum level may not be higher than the maximum level! 1% min. dimming value is defined by Z-Wave multilevel device class.

#### Parameter no. 61 – Maximum dimming value

Available config. parameters (data type is 1 Byte DEC):

- default value 99 = 99% (Maximum dimming value)
- 2 - 99 = 2% - 99%, step is 1%. Maximum dimming values is set by entered value.

**NOTE:** The maximum level may not be lower than the minimum level! 99% max. dimming value is defined by Z-Wave multilevel device class.

**Parameter no. 65 – Dimming time (soft on/off)**

Set value means time of moving the Dimmer between min. and max. dimming values by short press of push button I1 or controlled through UI (BasicSet). Available configuration parameters (data type is 2 Byte DEC):

- default value 100 = 1s
- 50 - 255 = 500 mseconds - 2550 mseconds (2,55s), step is 10 mseconds

**Parameter no. 66 – Dimming time when key pressed**

Time of moving the Dimmer between min. and max. dimming values by continuous hold of push button I1 or associated device. Available configuration parameters (data type is 2 Byte DEC):

- default value 3 = 3s
- 1 - 255 = 1 second – 255 seconds

**Parameter no. 67 – Ignore start level**

This parameter is used with association group 3.

A receiving device SHOULD respect the start level if the Ignore Start Level bit is 0. A receiving device MUST ignore the start level if the Ignore Start Level bit is 1. Available configuration parameters (data type is 1 Byte DEC):

- default value 0
- 0 - respect start level
- 1 - ignore start level

**Parameter no. 68 – Dimming duration**

This parameter is used with association group 3.

The Duration field MUST specify the time that the transition should take from the current value to the new target value. A supporting device SHOULD respect the specified Duration value. Available configuration parameters (data type is 1 Byte DEC):

- default value 0 (dimming duration according to parameter 66)
- 1 - 127 (from 1 to 127 seconds)

**Parameter no. 100 – Enable / Disable Endpoints I2 or select Notification Type and Event**

Enabling I2 means that Endpoint (I2) will be present on UI. Disabling it will result in hiding the endpoint according to the parameter set value. Additionally, a Notification Type and Event can be selected for the endpoint. Available configuration parameters (data type is 1 Byte DEC):

**Endpoint device type selection:****- notification sensor (1 - 6):**

GENERIC\_TYPE\_SENSOR\_NOTIFICATION,  
SPECIFIC\_TYPE\_NOTIFICATION\_SENSOR

- default value 0
- 1 - Home Security; Motion Detection, unknown loc.
- 2 - CO; Carbon Monoxide detected, unknown loc.
- 3 - CO2; Carbon Dioxide detected, unknown loc.
- 4 - Water Alarm; Water Leak detected, unknown loc.
- 5 - Heat Alarm; Overheat detected, unknown loc.
- 6 - Smoke Alarm; Smoke detected, unknown loc.
- 0 - Endpoint, I2 disabled

**- sensor binary (9):** GENERIC\_TYPE\_SENSOR\_BINARY,  
SPECIFIC\_TYPE\_NOT\_USED

NOTE 1: After parameter change, first exclude module (without setting parameters to default value) then wait at least 30s and then re include the module!

NOTE 2: When the parameter is set to value 9 the notifications are send for Home Security.

**Parameter no. 101 – Enable / Disable Endpoints I3 or select Notification Type and Event**

Enabling I3 means that Endpoint (I3) will be present on UI. Disabling it will result in hiding the endpoint according to the parameter set value. Additionally, a Notification Type and Event can be selected for the endpoint. Available configuration parameters (data type is 1 Byte DEC):

**Endpoint device type selection:****- notification sensor (1 - 6):**

GENERIC\_TYPE\_SENSOR\_NOTIFICATION,  
SPECIFIC\_TYPE\_NOTIFICATION\_SENSOR

- default value 0
- 1 - Home Security; Motion Detection, unknown loc.
- 2 - CO; Carbon Monoxide detected, unknown loc..
- 3 - CO2; Carbon Dioxide detected, unknown loc.
- 4 - Water Alarm; Water Leak detected, unknown loc.
- 5 - Heat Alarm; Overheat detected, unknown loc.
- 6 - Smoke Alarm; Smoke detected, unknown loc.
- 0 - Endpoint, I3 disabled

**- sensor binary (9):** GENERIC\_TYPE\_SENSOR\_BINARY,  
SPECIFIC\_TYPE\_NOT\_USED

NOTE 1: After parameter change, first exclude module (without setting parameters to default value) then wait at least 30s and then re include the module!

NOTE 2: When the parameter is set to value 9 the notifications are send for Home Security.

**Parameter no. 110 – Temperature sensor offset settings**

Set value is added or subtracted to actual measured value by sensor. Available configuration parameters (data type is 2 Byte DEC):

- default value 32536
- 32536 - offset is 0.0C
- From 1 to 100 - value from 0.1 °C to 10.0 °C is added to actual measured temperature.
- From 1001 to 1100 - value from -0.1 °C to -10.0 °C is subtracted to actual measured temperature.

**Parameter no. 120 – Temperature sensor reporting**

If digital temperature sensor is connected, module reports measured temperature on temperature change defined by this parameter. Available configuration parameters (data type is 1 Byte DEC):

- default value 5 = 0,5°C change
- 0 - reporting disabled
- 1 - 127 = 0,1°C - 12,7°C, step is 0,1°C

**Parameter No. 250 – Unsecure / Secure Inclusion**

Available configuration parameter (data type is 1 Byte Dec):

- default Value 0
- 0 – Unsecure Inclusion
- 1 – Secure Inclusion

A Flush dimmer supports both, the secure and unsecure inclusion. Even if the controller does not support security command classes, a dimmer could be included as unsecure and keep all the functionality.

**Technical Specifications**

Power supply	110 - 230 VAC ±10% 50 or 60Hz** (24-30VDC)
Rated load current of AC output	0,6A / 230VAC
Rated load current of DC output	0,85A / 30VDC
Output circuit power of AC output (resistive load)*	140W (230VAC)
Output circuit power of DC output (resistive load)	21W (24VDC)
Power measurement accuracy	±/-2W
Digital temperature sensor range (sensor must be ordered separately)	-50 ~ +125°C
Operation temperature	-10 ~ +40°C
Distance	up to 30 m indoors (depending on building materials)
Dimensions (WxHxD)	41,8x36,8x15,4mm

(package)	(79x52x22mm)
Weight (Brutto with package)	28g (34g)
Electricity consumption	0,7W
For installation in boxes	Ø ≥ 60mm or 2M, depth ≥ 60mm
Switching	MOSFET (Trailing edge)

\*max 100W mono-phase asynchronous fan motor can be connected to Dimmer output.

\*\* depend on ordering code

Max Power Limit is automatically set by a software. If max power is exceeded for more than 5 seconds, the output is turned off up to the next power cycle of the module. When overload occurred, Event "Over-load detected" is send to the gateway.

Consumption in kWh is reported on every change for 0.1kWh.

**Description of switch function:**

Switch toggles (parameter 1 set to 1) the state of the light bulb between the last dimming value and 0. If last dimming value is 0 then the light is turned 100% when switch changes its state.

**Bulb types which support dimming function:**

- The classical incandescent bulbs.
- Halogen bulbs operated by 230 V AC (High Voltage Halogen).
- Low voltage halogen bulbs with electronic or conventional transformer.
- Dimmable compact fluorescent bulb (CFL). If the bulb at low intensities flushes, it is recommended to set parameter 60 (minimum dimming value) to 30 or more.
- Dimmable LED bulbs.

**Wave Device Class:**

ZWAVEPLUS\_INFO\_REPORT\_ROLE\_TYPE\_SLAVE\_ALWAYS\_ON

GENERIC\_TYPE\_SWITCH\_MULTILEVEL

SPECIFIC\_TYPE\_POWER\_SWITCH\_MULTILEVEL

**Z-Wave Supported Command Classes:**

COMMAND\_CLASS\_ZWAVEPLUS\_INFO\_V2,

COMMAND\_CLASS\_VERSION\_V2

COMMAND\_CLASS\_DEVICE\_RESET\_LOCALLY\_V1

COMMAND\_CLASS\_MANUFACTURER\_SPECIFIC\_V2

COMMAND\_CLASS\_POWERLEVEL\_V1

COMMAND\_CLASS\_SECURITY

**Securely Supported Command Classes:**

COMMAND\_CLASS\_BASIC\_V1

COMMAND\_CLASS\_SWITCH\_ALL\_V1

COMMAND\_CLASS\_SWITCH\_BINARY\_V1

COMMAND\_CLASS\_SENSOR\_BINARY\_V1

COMMAND\_CLASS\_SWITCH\_MULTILEVEL\_V3

COMMAND\_CLASS\_METER\_V4

COMMAND\_CLASS\_SENSOR\_MULTILEVEL\_V7

COMMAND\_CLASS\_NOTIFICATION\_V5

COMMAND\_CLASS\_MULTICHANNEL\_V4

COMMAND\_CLASS\_ASSOCIATION\_2

COMMAND\_CLASS\_MULTICHANNEL\_ASSOCIATION\_V3

COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO\_V2

COMMAND\_CLASS\_CONFIGURATION\_V1

COMMAND\_CLASS\_MARK

COMMAND\_CLASS\_BASIC\_V1

COMMAND\_CLASS\_SWITCH\_MULTILEVEL\_V3

**Endpoint 1****Device Class:**

ZWAVEPLUS\_INFO\_REPORT\_ROLE\_TYPE\_SLAVE\_ALWAYS\_ON

GENERIC\_TYPE\_SWITCH\_MULTILEVEL

SPE SPECIFIC\_TYPE\_POWER\_SWITCH\_MULTILEVEL

**Command Classes:**

COMMAND\_CLASS\_ZWAVEPLUS\_INFO\_V2

COMMAND\_CLASS\_SECURITY

COMMAND\_CLASS\_ASSOCIATION\_2

COMMAND\_CLASS\_MULTICHANNEL\_ASSOCIATION\_V3

COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO\_V2

COMMAND\_CLASS\_BASIC\_V1

COMMAND\_CLASS\_SWITCH\_ALL\_V1

COMMAND\_CLASS\_SWITCH\_BINARY\_V1

COMMAND\_CLASS\_SWITCH\_MULTILEVEL\_V3

COMMAND\_CLASS\_METER\_V4

COMMAND\_CLASS\_NOTIFICATION\_V5

COMMAND\_CLASS\_MARK

COMMAND\_CLASS\_BASIC\_V1

**Endpoint 2 (I2):****Device Class:**

ZWAVEPLUS\_INFO\_REPORT\_ROLE\_TYPE\_SLAVE\_ALWAYS\_ON

GENERIC\_TYPE\_SENSOR\_NOTIFICATION

SPECIFIC\_TYPE\_NOTIFICATION\_SENSOR

**Securely Supported Command Classes:**

COMMAND\_CLASS\_ZWAVEPLUS\_INFO\_V2

COMMAND\_CLASS\_SECURITY

COMMAND\_CLASS\_ASSOCIATION\_V2

COMMAND\_CLASS\_MULTICHANNEL\_ASSOCIATION\_V3

COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO\_V2

COMMAND\_CLASS\_SENSOR\_BINARY\_V1

COMMAND\_CLASS\_BASIC\_V1

COMMAND\_CLASS\_NOTIFICATION\_V5

COMMAND\_CLASS\_MARK

COMMAND\_CLASS\_BASIC\_V1

**Endpoint 3 (I3):****Device Class:**

ZWAVEPLUS\_INFO\_REPORT\_ROLE\_TYPE\_SLAVE\_ALWAYS\_ON

GENERIC\_TYPE\_SENSOR\_NOTIFICATION

SPECIFIC\_TYPE\_NOTIFICATION\_SENSOR

**Command Classes:**

COMMAND\_CLASS\_ZWAVEPLUS\_INFO\_V2

COMMAND\_CLASS\_SECURITY

COMMAND\_CLASS\_ASSOCIATION\_V2

COMMAND\_CLASS\_MULTICHANNEL\_ASSOCIATION\_V3

COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO\_V2

COMMAND\_CLASS\_SENSOR\_BINARY\_V1

COMMAND\_CLASS\_BASIC\_V1

COMMAND\_CLASS\_NOTIFICATION\_V5

COMMAND\_CLASS\_MARK

COMMAND\_CLASS\_BASIC\_V1

**Endpoint 4:****Device Class:**

ZWAVEPLUS\_INFO\_REPORT\_ROLE\_TYPE\_SLAVE\_ALWAYS\_ON

GENERIC\_TYPE\_SENSOR\_MULTILEVEL

SPECIFIC\_TYPE\_ROUTING\_SENSOR\_MULTILEVEL

**Command Classes:**

COMMAND\_CLASS\_ZWAVEPLUS\_INFO\_V2

COMMAND\_CLASS\_SECURITY

COMMAND\_CLASS\_ASSOCIATION\_V2

COMMAND\_CLASS\_MULTICHANNEL\_ASSOCIATION\_V3

COMMAND\_CLASS\_ASSOCIATION\_GRP\_INFO\_V2

COMMAND\_CLASS\_SENSOR\_MULTILEVEL\_V7

NOTE: The above list is valid for the product with a temperature sensor connected to TS terminal. In case the sensor is not connected then following command class isn't supported:

COMMAND\_CLASS\_SENSOR\_MULTILEVEL\_V7

NOTE: The product supports the following

**COMMAND\_CLASS\_NOTIFICATION\_V5 events:**

- Smoke Alarm v2 – Smoke detected, unknown loc. (0x02)
- CO Alarm v2 – CO detected, unknown location (0x02)
- CO2 Alarm – CO2 detected, unknown loc (0x02)
- Heat Alarm v2 – Overheat detected, unknown location (0x02)
- Water Alarm v2 – Water Leak detected, unknown location (0x02)
- Home Security – Motion Detection, unknown location (0x08)

This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from any other manufacturers. All constantly powered nodes in the same network will act as repeaters regardless of the vendor in order to increase reliability of the network.

**Important disclaimer**

Z-Wave wireless communication is inherently not always 100% reliable, and as such, this product should not be used in situations in which life and/or valuables are solely dependent on its function.

**Warning!**

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal at least for free of charge.

This user manual is subject to change and improvement without notice.

**NOTE:** User manual is valid for module with SW version S3 (SW version is part of P/N)! Example: P/N: ZMNHDDX HXS3Px



Goap d.o.o. Nova Gorica  
Ulica Klementa Juga 007  
5250 Solkan  
Slovenia  
GOAP Dimmer PLUS user  
manual\_V1.6\_eng